

AVICHE



SUPER AIR PURIFIER-Y4A

BRING FRESH AIR HOME

Super Air Purifier is a new generation air purifier, which is designed for large room, hotel, hospital and conference room etc. It used patented micro negative ions technology can make the PM2.5 reduce to 0 in room. The sterilization rate is 99.9% which can quickly offer fresh air in 5 minutes. It can real-time display the room air quality like PM2.5, chemical pollutants, temperature and humidity etc.



- PM2.5 PM2.5=0
- Formaldehyde Efficient area: up to 100 m²
- Pollen 20 million Negative ions
- Bacteria Sterilization rate: 99.9%
- Second-Hand Smoke Real-time Display



01

360° Full Circulation Efficient area: up to 100 m²

Patented new technology air duct system, 360° dead-zone free air intake design and patented the oblique blow pressurization air duct technology, the nature real fresh air is directly blown out to room roof and fall down to long distance space, which can quickly complete room air circulation and air balance. It can quickly create PM2.5 <10 fresh air room environment.

02

Real-time display

- Good
- Moderate
- Unhealthy
- Very Unhealthy



**5 min !
LET NATURE FRESH AIR
FULL OF YOUR ROOM**



03

Negative ions purification Breathe the natural fresh air

Adopted micro negative ions technology, release **20 million** highly-activated and small particle negative ions, which can move longer distance and have excellent to remove PM2.5, smoke, pollen, bacteria and virus.

04



Sterilization Rate: 99% Prevention of respiratory diseases

AVICHE Super Air Purifier equipped with a UV lamp. It is soundless and doesn't emit any ozone. UV radiations kill germs, microbes, fungi, and bacteria, effectively sterilizing your air.

05

Multiple purification Remove all kind of harmful substances

Large capacity modified activated carbon + Micro holes technology + Efficient HEPA filter with catalytic technology + micro negative IONS. Different layers of filtration can remove all kinds of harmful substance.

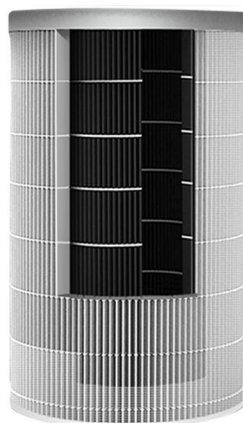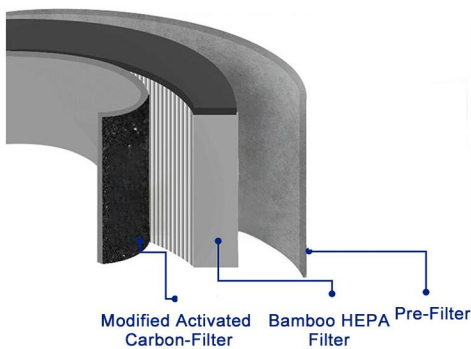

Pre-Filter Filter impurities

User can replace the pre-filter regularly when used in dust environment. It can prolong the whole filter service life.



Dust



Hair



Dander

Bamboo HEPA-Filter Remove harmful substances



PM2.5



Smoke



Allergen



Bacteria

Activated Carbon-Filter Remove odor



Formaldehyde



Peculiar Smell



Benzene

Product model

Y4A

Colour

White+Black /Golden+Black

Efficient area

60-100 m²

Particle CADR

503.1 m³/h

Sterilization rate

99.9%

Formaldehyde CADR

166.2 m³/h

Micro negative ions

20 million pcs/cm³

Input power

AC100-240V 50Hz/60hz

Wattage

44w

Size

312.5 x 627mm

Net weight

9.4 kg